**Product Information** 

## **VESTAKEEP® i4 3DF-T**

# POLYETHER ETHER KETONE FILAMENT TESTING GRADE DESIGNED FOR RESEARCH, DEVELOPMENT AND PROCESS OPTIMIZATION



**VESTAKEEP® i4 3DF-T** is a filament extruded from natural colored, high viscosity VESTAKEEP® i4 G polyether ether ketone (PEEK) resin. The material is a testing grade designed for research, development and process optimization only. It must not be used for medical devices.

## Purpose of the testing grade

The purpose of the testing grade is to offer a cost-efficient solution for printing process development.

The testing grade VESTAKEEP® i4 3DF-T and the implantable grade VESTAKEEP® i4 3DF are both extruded from implantable-grade VESTAKEEP® i4 G resin. They share the same base resin, processability and mechanical properties.

## **Delivery of VESTAKEEP® i4 3DF-T**

VESTAKEEP® i4 3DF-T filament has a diameter of 1.75 mm (+/- 0.02 mm\*) and is supplied on TROGAMID®-spools in either 250g or 500g. The spools are packaged in double bags to facilitate transfer into clean areas.

The properties listed are for information only and only apply to the VESTAKEEP® i4 G resin used in the manufacture of VESTAKEEP® i4 3DF-T. The performance and the purity of any parts manufactured from VESTAKEEP® i4 3DF-T are highly dependent on any 3D- or additive-printing processes, or any other processing, to which the filament is subjected.

Only density and filament diameter apply to VESTAKEEP® Care i4 3DF-T directly.

\*Diameters are tested by a multi-axis laser gauge. The diameter is the average of these axis.

FOR FURTHER INFORMATION PLEASE CONTACT US AT <a href="mailto:evonik.com/">evonik.com/</a> OR VISIT OUR PRODUCT AT <a href="https://www.evonik.com/medical-technology">www.evonik.com/medical-technology</a>

#### **Key Features**

Industrial Sector

Medical Devices, 3D Printing

Processing

3D Printing

**Delivery form** 

(Mono)filament

**Optics** Opaque Resistance to

Heat (thermal stability), Hydrolysis / hot water, Oil / fuels

Conformity

Medical application

**Additives** 

Unfilled



## **VESTAKEEP®**

Machanian proportion ISO	dry	Unit	Test Standard
Mechanical properties ISO			
Tensile modulus	3500	MPa	ISO 527
Tensile strength	94	MPa	ISO 527
Yield stress	94	MPa	ISO 527
Yield strain	5	%	ISO 527
Stress at break	76	MPa	ISO 527
Charpy impact strength, +23°C	N	kJ/m²	ISO 179/1eU
Charpy impact strength, -30°C	N	kJ/m²	ISO 179/1eU
Charpy notched impact strength, +23°C	9.1	kJ/m²	ISO 179/1eA
Type of failure	С	-	-
Charpy notched impact strength, -30°C	6	kJ/m²	ISO 179/1eA
Type of failure	С	-	-
Thermal properties	dry	Unit	Test Standard
Melting temperature	338	°C	ISO 11357-1/-3
Glass transition temperature, DSC	152	°C	ISO 11357-1/-2
Temp. of deflection under load A, 1.80 MPa	150	°C	ISO 75-1/-2
Temp. of deflection under load B, 0.45 MPa	205	°C	ISO 75-1/-2
Vicat softening temperature A, 10 N, 50 K/h	335	°C	ISO 306
Vicat softening temperature B, 50 N, 50 K/h	305	°C	ISO 306
Melting Temperature	338	°C	ASTM D 3418
Physical properties	dry	Unit	Test Standard
Density	1300	kg/m³	ISO 1183
Filament Diameter	1.75	mm	-
Density	1300	kg/m³	ASTM D 792
Burning Behav.	d	Unit	Test Standard
burning benav.	dry	Onit	i est standard



## **VESTAKEEP®**

Thickness tested	3.2	mm	_
Thickness tested	3.2		
Rheological properties	dry	Unit	Test Standard
Melt volume-flow rate, MVR	12	$cm^3/10min$	ISO 1133
Temperature	380	°C	-
Load	5	kg	-
LOAU	3	ку	_

#### Characteristics

**Applications** Monofilament

Processing

Fused deposition molding, Additive manufacturing

**Special Characteristics** 

Semi-crystalline, High viscosity, Sterilizable

Features

Resistance to steam

Color

Natural color

**Chemical Resistance** 

Acid resistance, Alkali resistance, Solvent resistance, Grease resistance, Hydrolytically stable, Oil resistance, Oxidation resistance, General chemical resistance

#### Other extrusion

### Drying recommendations

We recommend to dry the filament prior to usage to avoid stringing, bubbles, or other defects.

- a) Filament on spool: minimum 12 hours at 80°C to 100°C. 100°C must not be exceeded to avoid distortion of the spool.
- b) Filament removed from spool: minimum 4 hours at 130°C to 140°C.


The maximum drying temperature of the filament is 140°C. Please also pay attention to the instructions of your drying device.

## **Spool dimensions**

For dimensions of the spool, please see drawing below. All dimensions are given in millimeter (mm).



## **VESTAKEEP®**

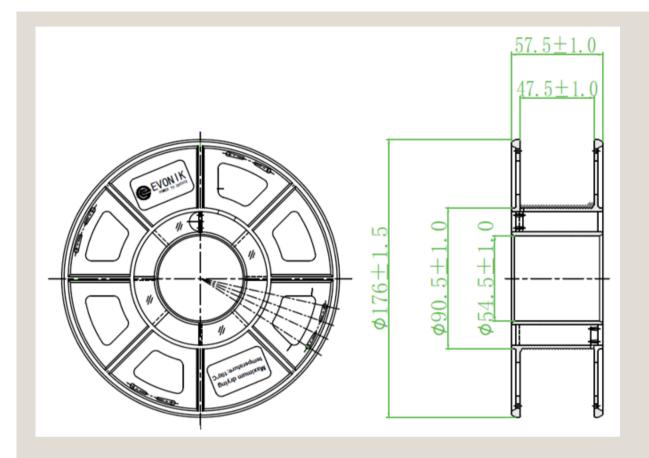

This information and all technical and other advice are based on Evonik's present knowledge and experience. However, Evonik assumes no liability for such information or advice, including the extent to which such information or advice may relate to third party intellectual property rights. Evonik reserves the right to make any changes to information or advice at any time, without prior or subsequent notice. Evonik disclaims all representations and warranties, whether express or implied, and shall have no liability for, merchantability of the product or its fitness for a particular purpose (even if Evonik is aware of such purpose), or otherwise. EVONIK SHALL NOT BE RESPONSIBLE FOR CONSEQUENTIAL, INDIRECT OR INCIDENTAL DAMAGES (INCLUDING LOSS OF PROFITS) OF ANY KIND. It is the customer's sole responsibility to arrange for inspection and testing of all products by qualified experts. Reference to trade names used by other companies is neither a recommendation nor an endorsement of the corresponding product, and does not imply that similar products could

® is a registered trademark of Evonik Industries AG or one of its subsidiaries

Evonik Operations GmbH Smart Materials High Performance Polymers 45772 Marl / Germany Tel: +49 2365 49-9878 evonik-hp@evonik.com

www.plastics-database.com

